




Screen Innovations
9715-B Burnet Rd, Suite 400 Austin, TX 78758
512.832.6939
www.screeninnovations.com

Version 1.3 | 4 October 2019

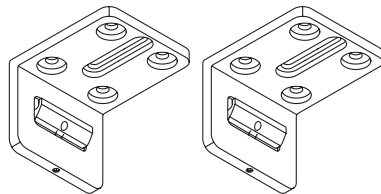

Solo / Pro 2 **Décora Ceiling Bracket** Installation Instructions



Please use this QR Code to access documents related to product and latest instructions.



Decora Ceiling
Brackets

Thank you for purchasing an SI product. If you have any questions or need any assistance with your Solo/Pro 2, we would love to help you.

Technical Support: 512.832.6939

Hours of Support: 7:30am - 5pm CST

screeninnovations.com

support@screeninnovations.com

INITIAL CONSIDERATIONS


Plan your installation. Determine the length of your cassette and the centerline of your viewing area to make sure that you can install the brackets 2"- 8" from the end of the cassette.

Standard kits come with a pair of Décora Ceiling Bracket assemblies. Each bracket can hold 50 lbs safely. For screens over 100 lbs, a third bracket is required.


Use appropriate fasteners. Wood screws are provided for mounting into wood ceiling joists only. If another mounting surface is to be used; then it is the installer's responsibility to provide appropriate fasteners.

PARTS IN THE BOX


- 1** (2) Décora Ceiling Brackets

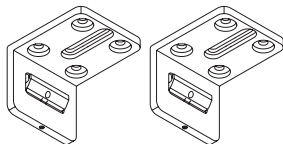

- 2** (8) No.10 flat-head screws

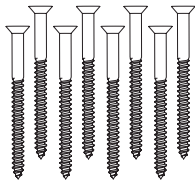

- 3** 3/32" and 5/64" hex keys

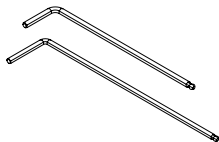


INSTALLATION

Proper mounting preparation will ensure a great installation. Mounting brackets must be screwed into structural members of such as ceiling joists. You may use wood screws provided, or other anchors (not provided) capable of carrying the load, that is suitable to the substrate.


⚠ DO NOT MOUNT TO HOLLOW SHEET ROCK.

Install Décora Ceiling Brackets

1. Determine the desired viewing area with vertical centerline of the projected viewing area.
2. The brackets must be installed 2 - 8 inches from each end of the cassette. Measure the overall length of the cassette to determine the min. and max. Horizontal spacing of the mounts. Mark the desired location of the brackets.

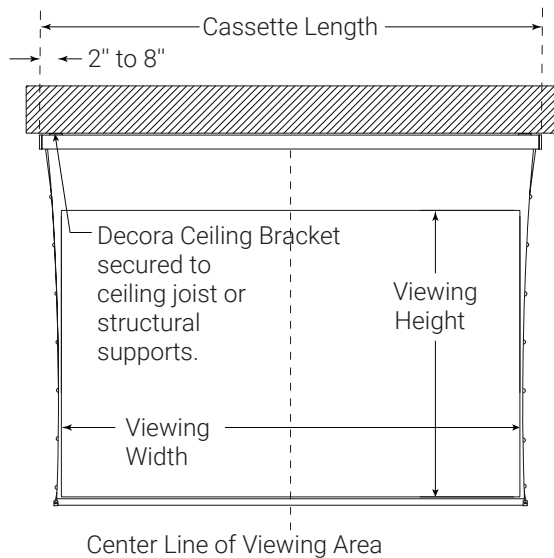


3. Attach the Décora Ceiling Brackets to the ceiling joists or other structural supports. The included screws can be used for securing to wood structural supports if securing to other materials then installer must select appropriate fasteners. Make sure brackets are plumb, and both on the same level line.

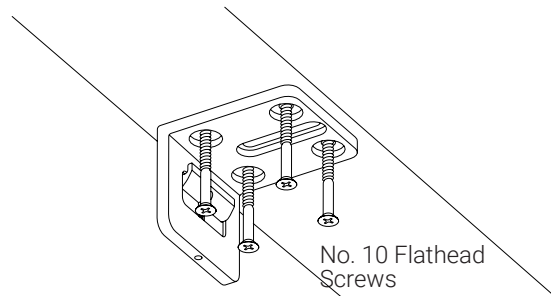


(contd. on next page)

4. Use the 5/64" hex key to lower the `cassette hook so that it is all the way down.

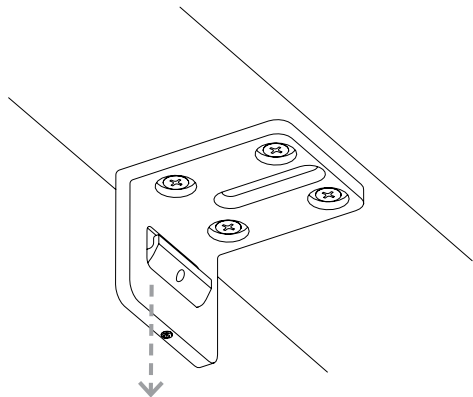


5. Hook the cassette onto the brackets. Then use the 5/64" hex key to turn the bottom screw until the cassette bottoms out on the bracket.

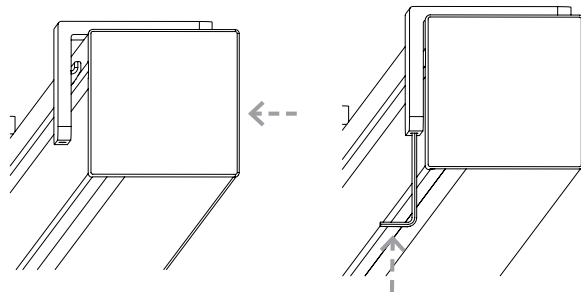

(contd. on next page)

6. Use the 3/32" hex key to tighten the locking screw in the back of the brackets.

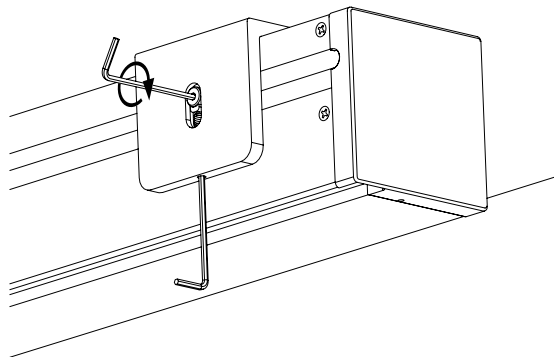

WARRANTY

New SI products carry a standard 1- year warranty on parts and labor.

FCC INFORMATION

This device complies with Part 15 of the FCC Results. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including that which may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for CLASS B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

⚠ Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Solo/Pro 2, the Solo wordmark, and the Screen Innovations logo are registered trademarks and the exclusive property of Screen Innovations.